

CHAROB ENTERPRISES

Specializing in Chevrolet Reproductions

11267 San Fernando Road
San Fernando, Ca. 91340
(818) 890-2321



INSTALLATION PROCEDURE TRUCK RADIO AND ANTENNA

1947-54 Chevrolet trucks will use the cowl type antenna, which will mount on the left-hand side of cab cowl. (See Figure 55.)

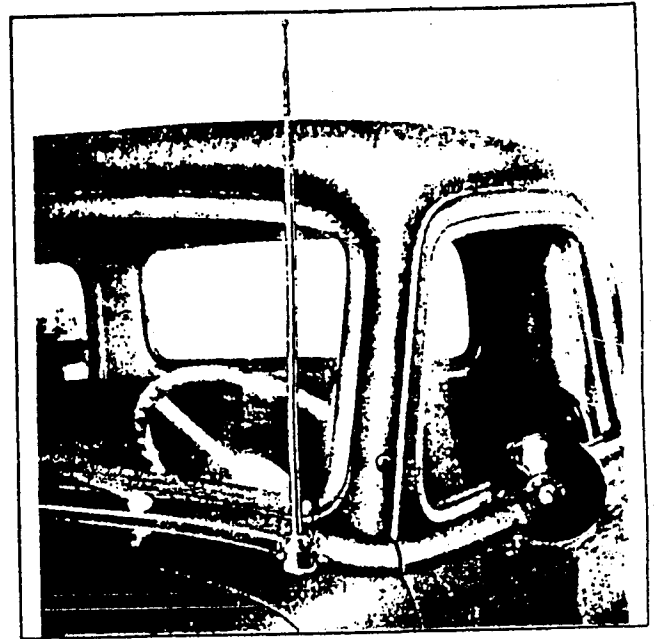


Figure 55

1. Assemble lead-in cable "P" and bracket "N" to antenna mast, then place spacer "F" over rod assembly
2. Place template on outside of cowl, left-hand side, lining up with body contour as indicated and drill $13/16$ " hole, scrape sound deadening from underside of cowl to insure good ground for antenna.
3. Pass antenna mast from inside cab thru $13/16$ " hole in cowl and attach bracket "O" to bracket "N" with bolt and nut "J" and "Q," fasten bracket "O" to side panel with self-tapping screws "L" and "M." DO NOT TIGHTEN. (See Figure 56.)
4. Place rubber pad "E," spacer "D" and nut "C" over antenna mast and tighten nut "C," make sure seal "G" is placed, then slip top insulator "B" over antenna and tighten. (See Figure 56.)
5. Tighten self-tapping screws "L" and "M" also bolt and nut "J" and "Q" making sure antenna is perpendicular.

986069

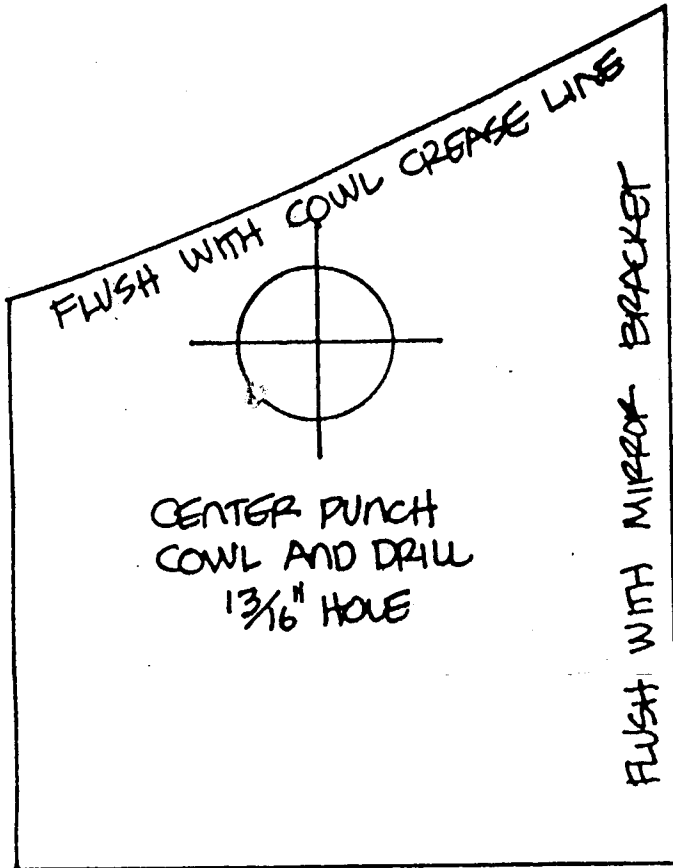


Figure 56

