


1947 THRU 1955 1ST SERIES TRUCK


LINE UP WITH CENTER OF
CENTER DOOR TRIM PANEL
LOWER ATTACHING SCREW.

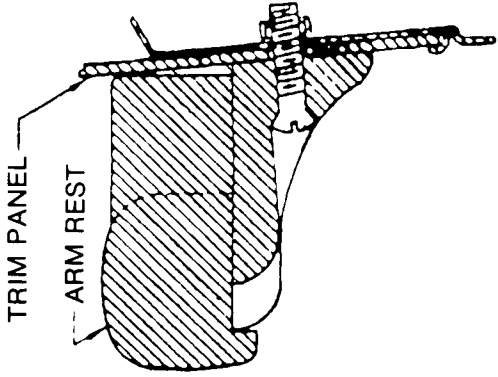

— INSTRUCTIONS —

TO LOCATE HOLES IN METAL UNDER R.H. DOOR TRIM PANEL, LOCATE TEMPLATE AS INDICATED AND CUT HOLES IN TRIM PANEL. FOR INSTALLATION ON L.H. DOOR TURN TEMPLATE OVER.

CUT TWO 1/2" DIA HOLES IN TRIM PANEL.

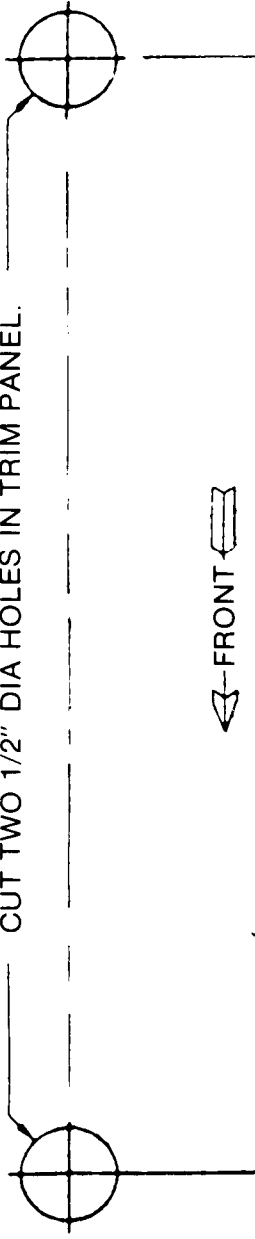

FLUSH WITH UPPER EDGE OF METAL BINDING ON DOOR TRIM PANEL.

CAREFULLY CUT TEMPLATE OUT WITH
SCISSORS ON THE OUTER LINE.