


13. Locate and tape the template to the body for mounting the lamps and drill holes as indicated thereon through the body and insulating panel on models 3105 and 3805. From inside the body, using the holes drilled through the insulating panel as a guide and the lamp reinforcement as a template, cut an access hole in the insulating panel. On suburban models, remove the trim panel for access.

14. Remove paint from the surface of body panel and reinforcement around the drilled hole for lamp mounting to assure a good ground contact.

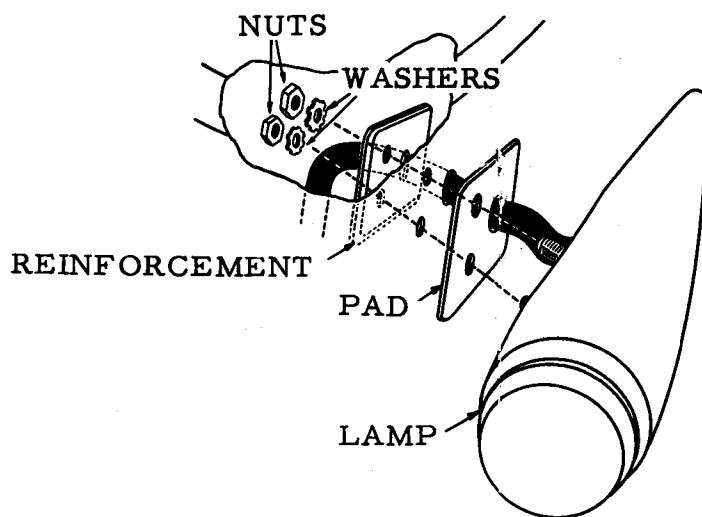

15. Mount lamp, pad, body reinforcement, washers and nuts in the order illustrated above.

Reinstall rear trim panels in Suburban models.