


16. On panel models direct harness between insulating panel and outer panel downward. From underneath the truck, bring tail and stop lamp wires out thru hole in inner panel and insert grommet.

On Suburban and Canopy models direct harness through nearest hole.

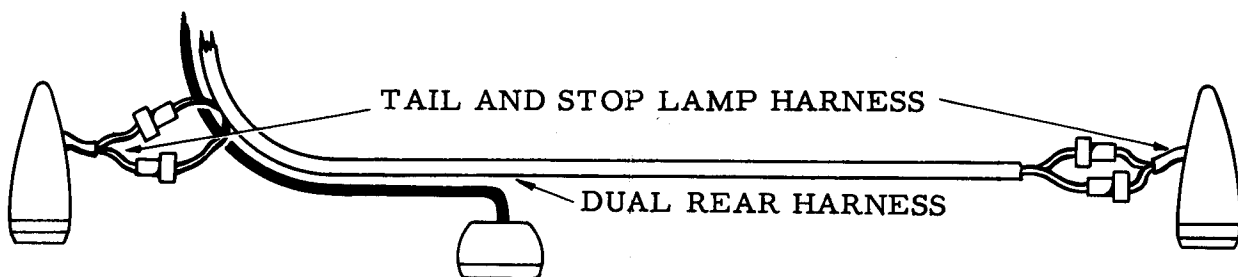

17. Connect tail and stop lamp harness to dual rear harness as shown.